


Coax Wall Mount Kit Installation

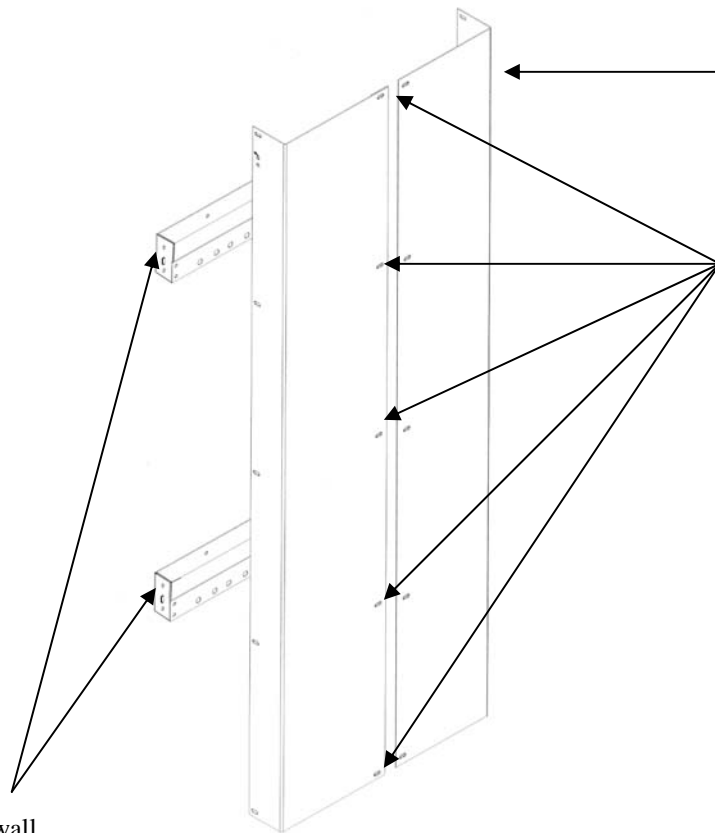

4 and 8 run kits are a single cover. 12 Run kits are two pieces.

Slide a retaining nut over sheet metal so that threaded nut lines up with hole in cover. Repeat for other holes. Slide other cover over 1st cover and use supplied 3/8" bolt with flat washer and lock washer to bolt covers together

Slide a retaining nut over wall mount bracket so that threaded nut lines up with hole in bracket. Repeat for other bracket. Slide cover over bracket and use 3/8" hardware to attach.